


KRB10 HOLE IN ONE BENCH TOP BIN INSTALLATION GUIDE

- 1) Mark position and cut 210mm dia hole through bench top.
- 2) Cut hole and test fit stainless steel ring into hole in bench.
- 3) Use construction adhesive to hold stainless steel ring in place.

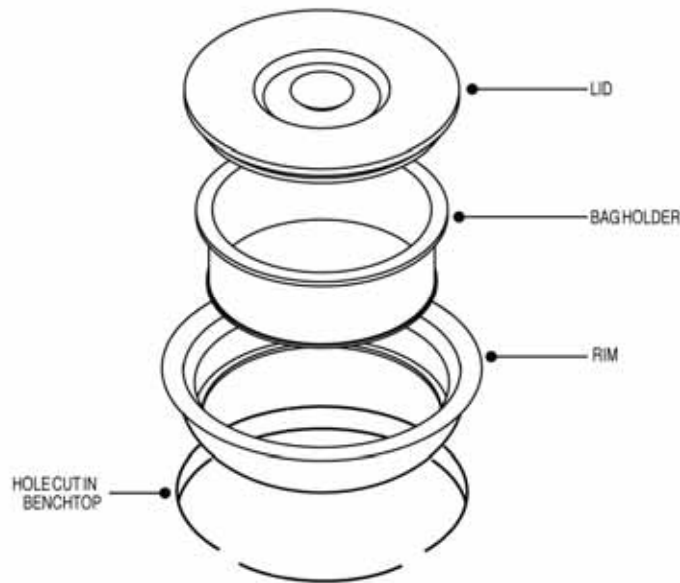

If the use of a bag is desired;

To fit bag, follow sketches below using small to medium garbage bags;

- 1) Fig. 1 Slip bag over bottom of bag holder.
- 2) Fig. 2 Pinch bag tight around holder and fold excess around.
- 3) Fig. 3 Stretch rubber strap and place over bag and bag holder to secure bag.

Slip bag through top of rim and feed through until bag holder sits on bottom edge of rim body. Bottom of bag should be supported in an appropriate sized bucket.

