


KRB12 SLIM SLIDE OUT BIN INSTALLATION GUIDE

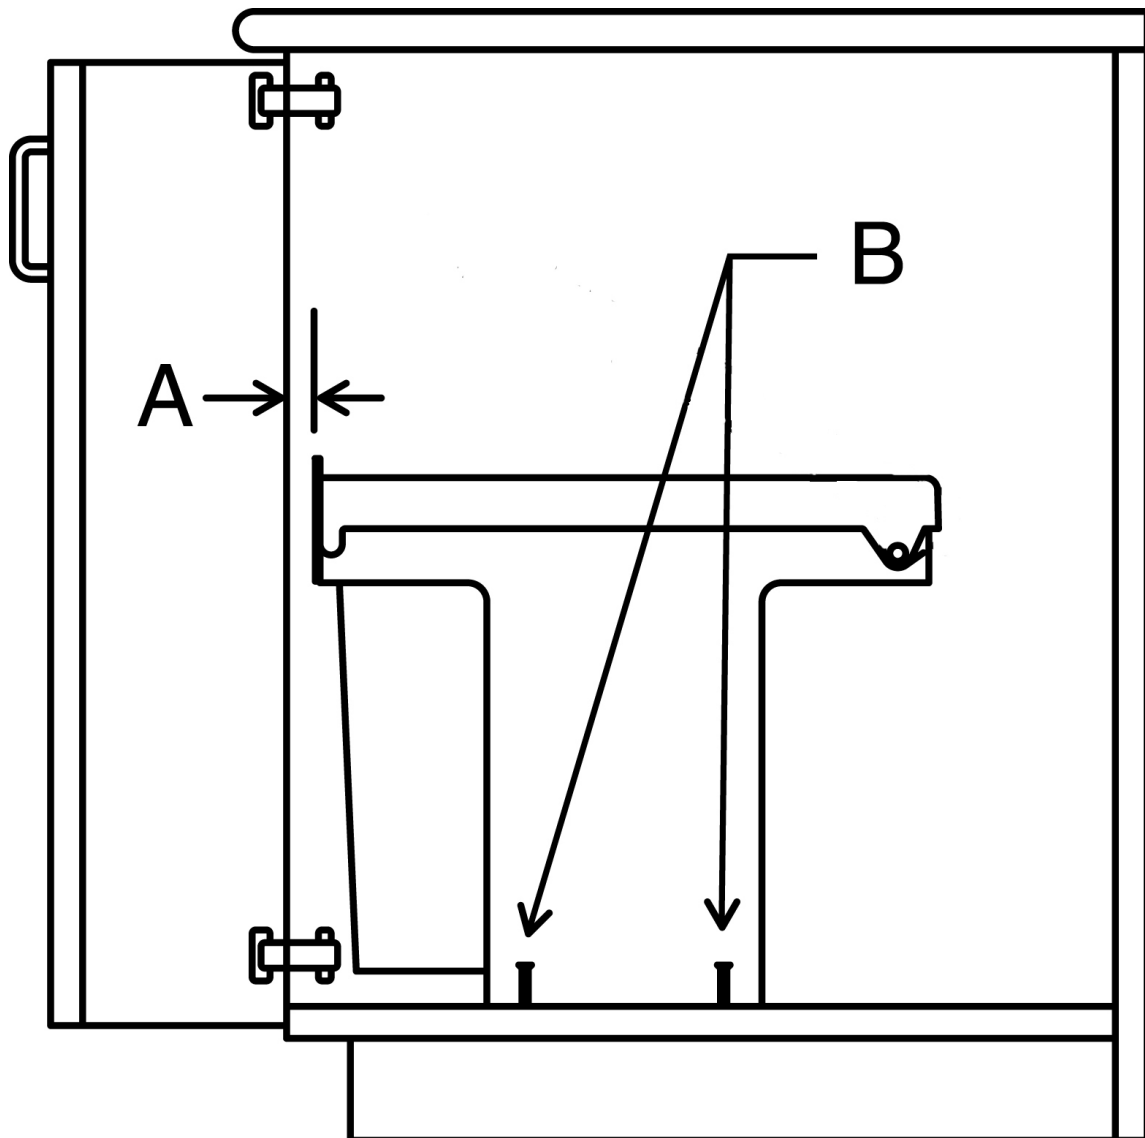

- (A) Allow approximately 5mm gap between door and slider front
- (B) Use 4 wood screws through mounting holes in frame
Note—it is important that the 4 screws are in place as this adds to the rigidity of the frame.

If required, we suggest that you use “Medium Kitchen Tidy Bags” with your purchase.